

Part Number H145

Description Emergency
Float Packing
Procedure

Box Part Number M50

Dimension 50x24x15

Other Packaging NA

Dimension NA

Logo Decals NA

NOTE: This procedure apply to all the STC models, except A109.

Materials to use:

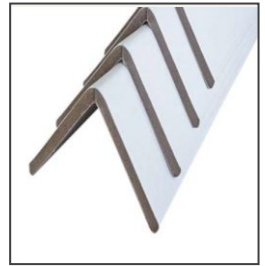

 Foam
Roll

 Bubble Wrap
Roll


Glue



Brush


 Cardboard box
(M50)

 Corner
protector

1. Select and place a cardboard box model M50 50x24x15 in the floor.
2. Begin to prepare the cardboard box by securely taping all the floor
3. Add few sections of foam along the floor of the box to cover the product as required.
4. Add few sections of bubble wrap along the floor of the box to cover the product as required.


 Revision: A
Date: 7/11/2022

Part Number

Description

Box Part Number

Dimension

Other Packaging

Dimension

Logo Decals

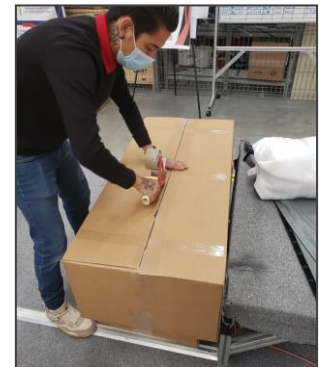
5. Wrap the product using the two protecting materials, create a white barrier and avoid the direct contact with the box (two complete turns at least).



6. Place the wrapped product inside the box, put sealed air bags on any free space that you may find



7. Add another layers of the two protective materials, one of foam an one of bubble wrap


Revision: A
Date: 7/11/2022

Part Number **Description** **Box Part Number** **Dimension** **Other Packaging** **Dimension** **Logo Decals**

8. At the end of the process, seal the box using tape, place 3 stripes at least.

9. Apply cardboard corners as required (Use a brush to apply glue on them).
Minumum of 6 pc, maximum of 12 pc.



Revision: A
Date:7/11/2022